


# NOVUM

LINEA SKYLINE  
ACCESORIOS





INSTALACION / INSTALLATION


①

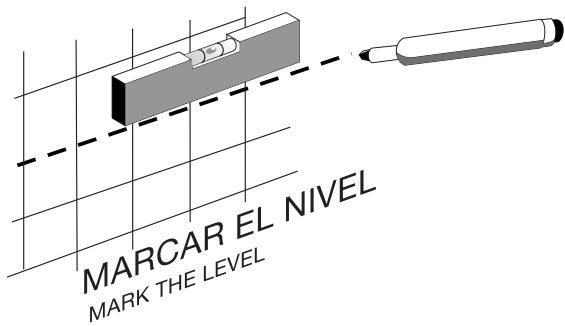


②

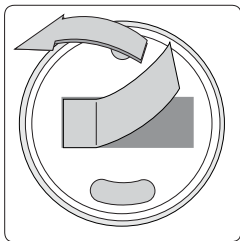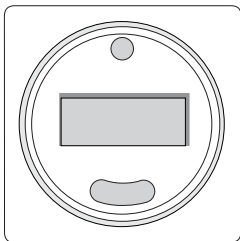


③

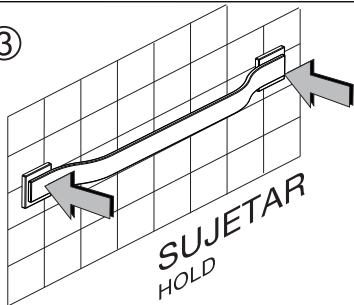

④

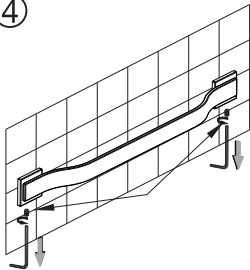


⑤

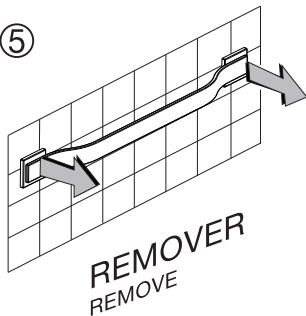


⑥


*Agujeros horizontales para:*  
*Horizontal holes for:*

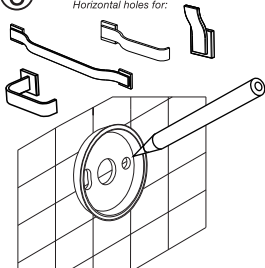


*Agujeros verticales para:*  
*Vertical holes for:*

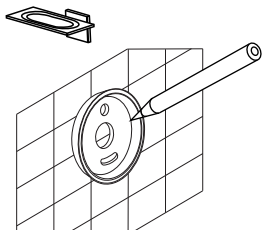

⑦

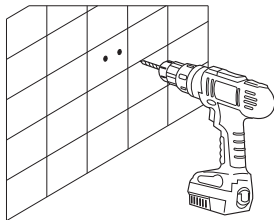


⑧

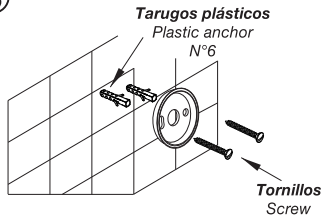


*\_Fije el soporte a la pared con los tornillos y los tarugos plásticos proporcionados.*


*\_Affix the support to the wall using the screws and the plastic anchors provided.*

9

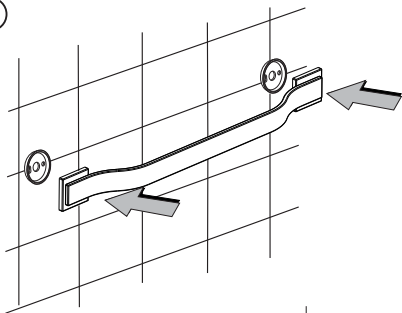


10

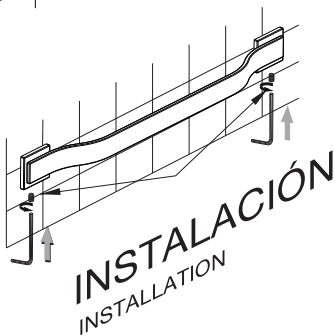


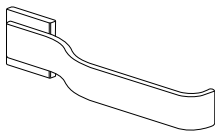


**Toallero barra corto**  
Towel holder  
FR163/J9

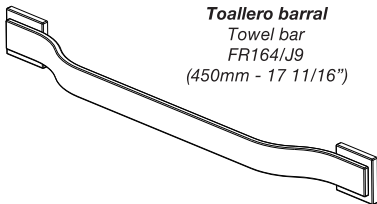


**Toallero barra**  
Towel bar  
FR164/J9  
(450mm - 17 11/16")



**Percha**  
Robe hook  
FR166/J9

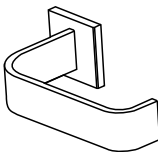

**Portarrollo**  
Toilet roll holder  
FR167/J9



**Jabonera**  
Soap dish  
FR168/J9