


# NOVUM

LINEA CASABLANCA  
ACCESORIOS




INSTALACION / INSTALLATION


①

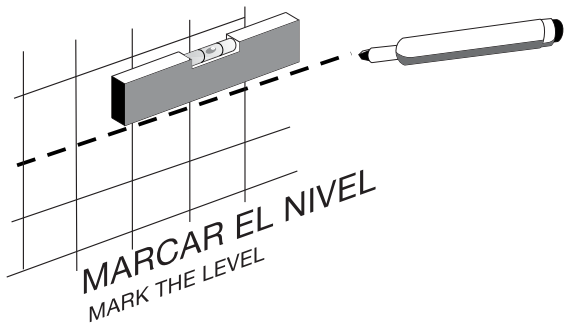


②

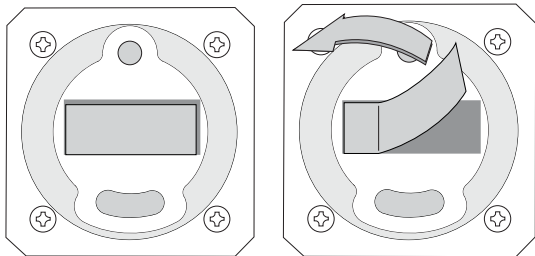


③



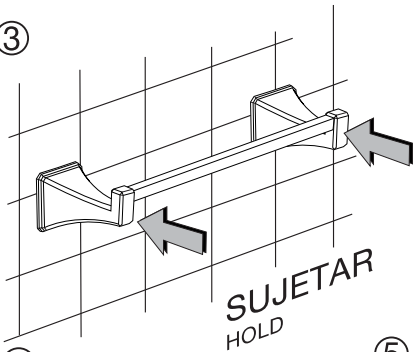


④

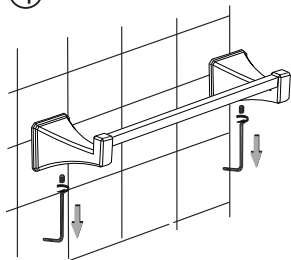


⑤

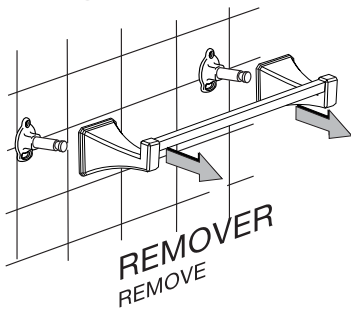

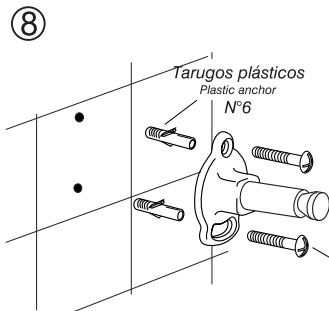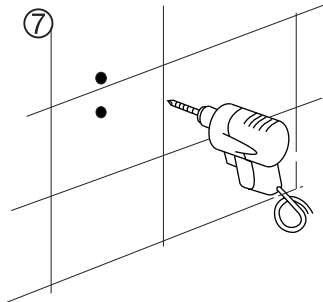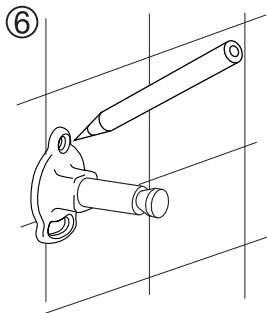


\_Fije el soporte a la pared con los tornillos y los tarugos plásticos proporcionados.


\_Affix the support to the wall using the screws and the plastic anchors provided.




⑧

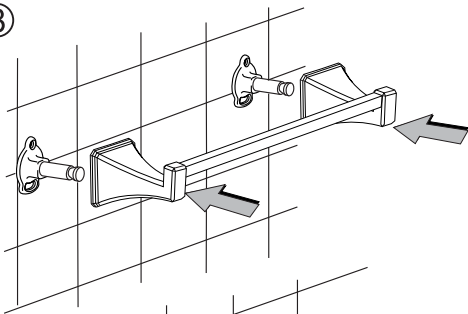

⑨

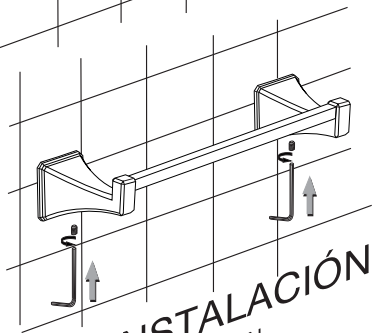


**INSTALACIÓN**  
INSTALLATION

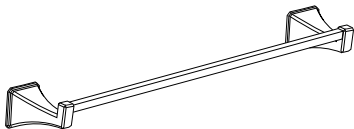


*Toallero barra*  
*Towel bar*

FR164/60 450 † (17 11/16")




*Toallero*  
*Towel holder*  
FR163/60



*Portarollo*  
*Toilet roll holder*  
FR167/60



*Jabonera*  
*Soap dish*  
FR168/60



*Percha*  
*Robe hook*  
FR166/60